


Grex 50AD-LM, 71AD-LM, 80AD-LM A11AD-LM

AD-LM Series Fine Wire Staplers w/ Long Magazine

EXPLODED DIAGRAM

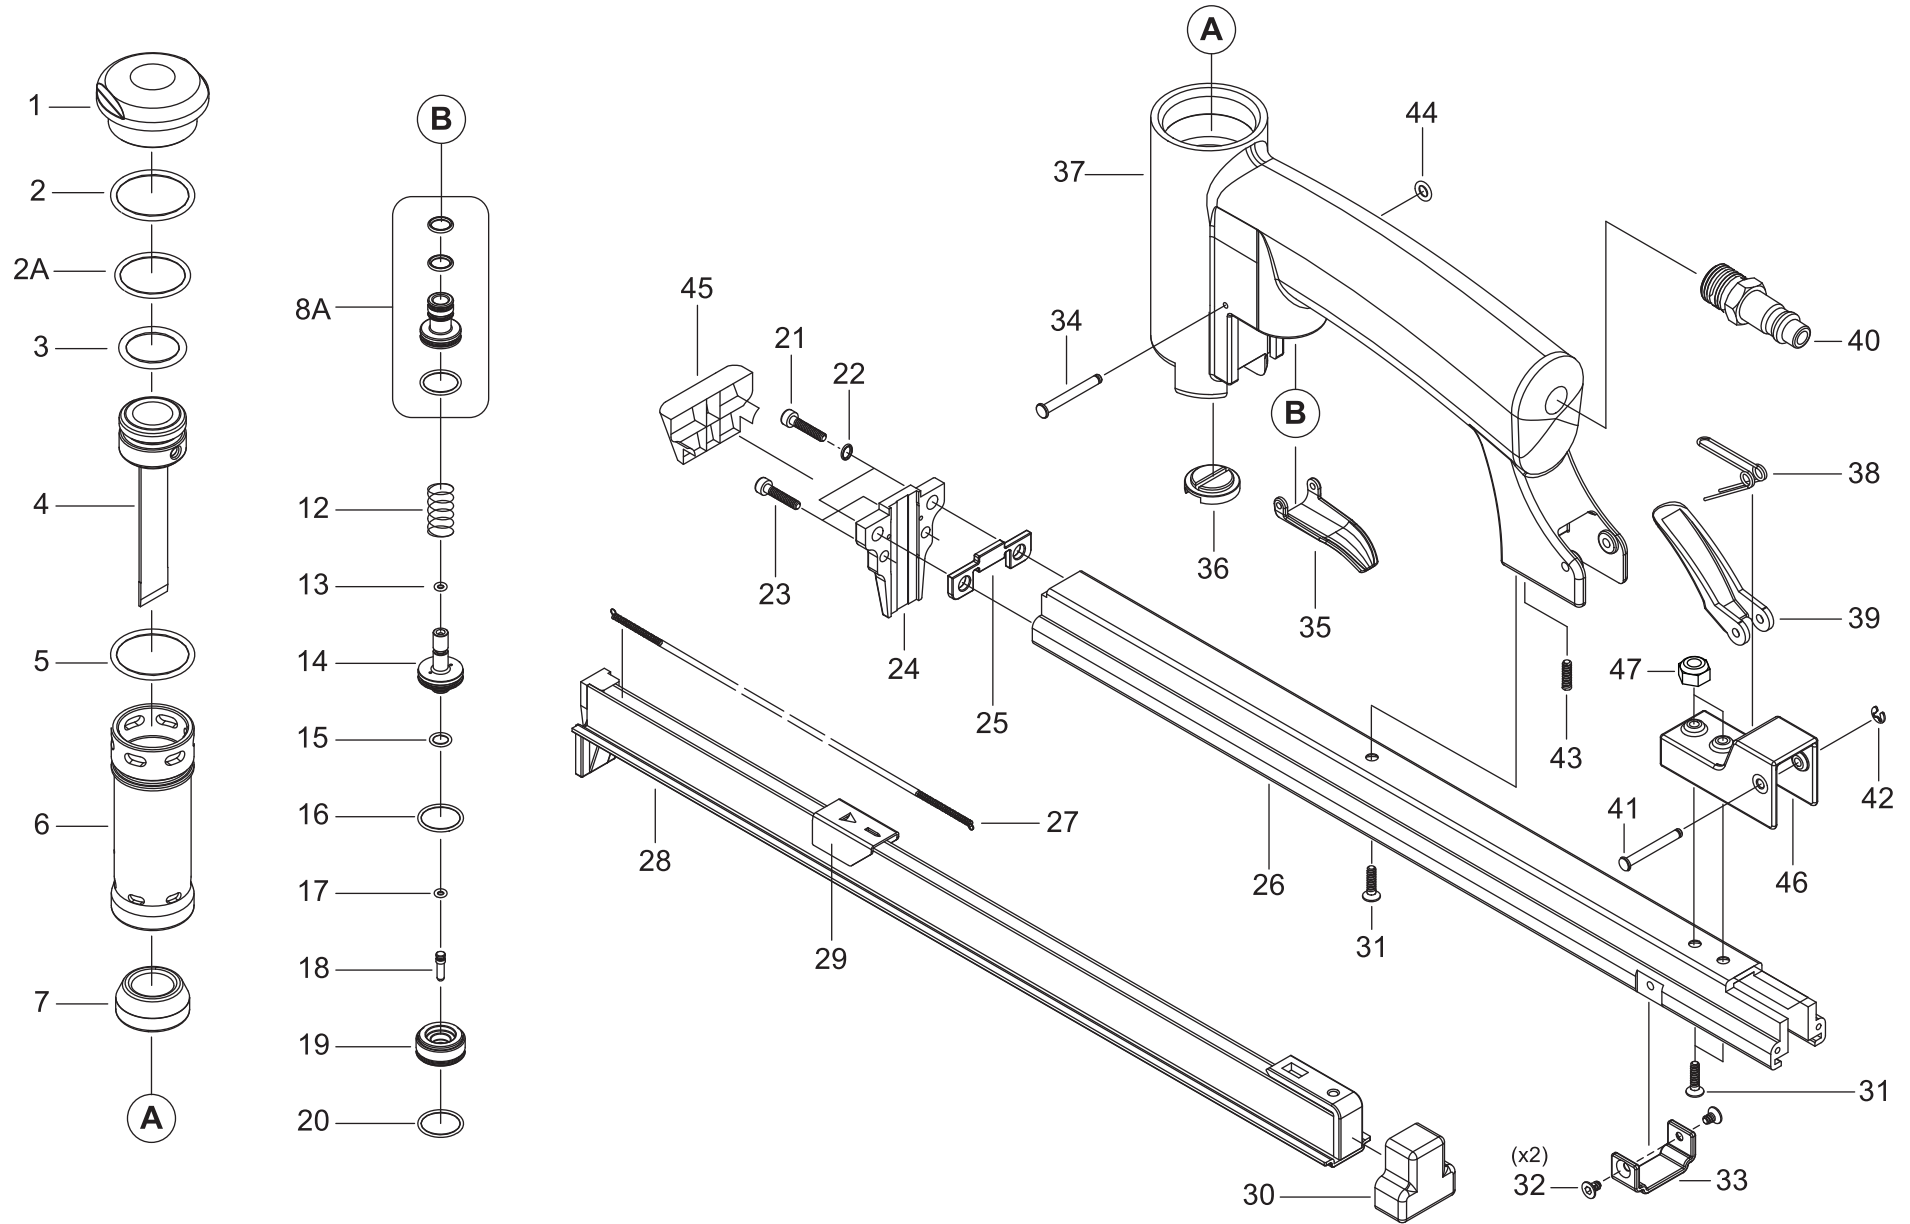

Grex 50AD-LM, 71AD-LM, 80AD-LM, A11AD-LM PARTS LIST

AD-LM Series Fine Wire Staplers w/ Long Magazine

No.	Part No.	Description	No.	Part No.	Description
1	23572	Head Cap Hammer	26	23583	Magazine Cover (50AD & AF)
2	96100	O-Ring (Head Cap / Cylinder)		23540	Magazine Cover (71AD & AF)
2A	96138	O-Ring		23541	Magazine Cover (80AD & AF)
3	96101	O-Ring (Driver Piston)		23591	Magazine Cover (A11AD)
4	23573	Piston Ram Assembly (50AD & AF)	27	23542	Pusher Spring
	23507	Piston Ram Assembly (71AD & AF)	28	23584	Magazine (50AD & AF)
	23512	Piston Ram Assembly (80AD & AF)		23544	Magazine (71AD & AF)
	23559	Piston Ram Assembly (A11AD)		23545	Magazine (80AD & AF)
5	96100	O-Ring (Head Cap / Cylinder)		23589	Magazine (A11AD)
6	23503	Cylinder (AD Series)	29	23074A	Pusher (50AD & AF)
7	23504	Bumper		23047	Pusher (71AD & AF)
8A	23563	Trigger Valve A Assembly		23556	Pusher (A11AD)
12	23506	Trigger Valve Spring	30	23518	Rear Magazine Bumper
13	96137	O-Ring C (Trigger Valve)	31	91010	Hex. Soc. Flat Head Screw
14	23508	Trigger Valve B (AD Series)	32	91004	Hex. Soc. Flat Head Screw
15	96105	O-Ring D (Trigger Valve) AD Series	33	23523	Magazine Retainer
16	96106	O-Ring E (Trigger Valve) AD Series	34	23519	Pin (Trigger)
17	96107	O-Ring F (Trigger Valve)	35	23524	Trigger
18	23509	Trigger Valve Stem (AD Series)	36	23525	Seal
19	23510	Triger Valve Guide (AD Series)	37	23527	Gun Body (AD Series)
20	96106	O-Ring E (Trigger Valve)	38	23528	Magazine Latch Spring
21	99039	Hex. Soc. Head Screw	39	23546	Magazine Latch
22	97002	Spring Washer	40	94001	Air Coupling Plug
23	99026	Hex. Soc. Head Screw	41	23530	Pin (Magazine Latch)
24	23574	Nose (50AD & AF)	42	95001	E-Ring
	23515	Nose (71AD & AF)	43	90009	Screw
	23520	Nose (80AD & AF)	44	96110	O-Ring
	23558	Nose (A11AD)	45	23561	Nose Cover
25	23513	Nose Plate (For all 71 & 80)	46	23547	Latch Bracket
	23564	Nose Plate (For all 50, A11 & 2116)	47	92001	Lock Nut